


Jonsered

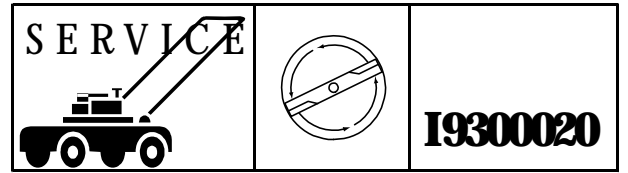

IPL, 455 SD, 1993-01

455 SD

Spare parts

Ersatzteile


Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

REPAIR PARTS

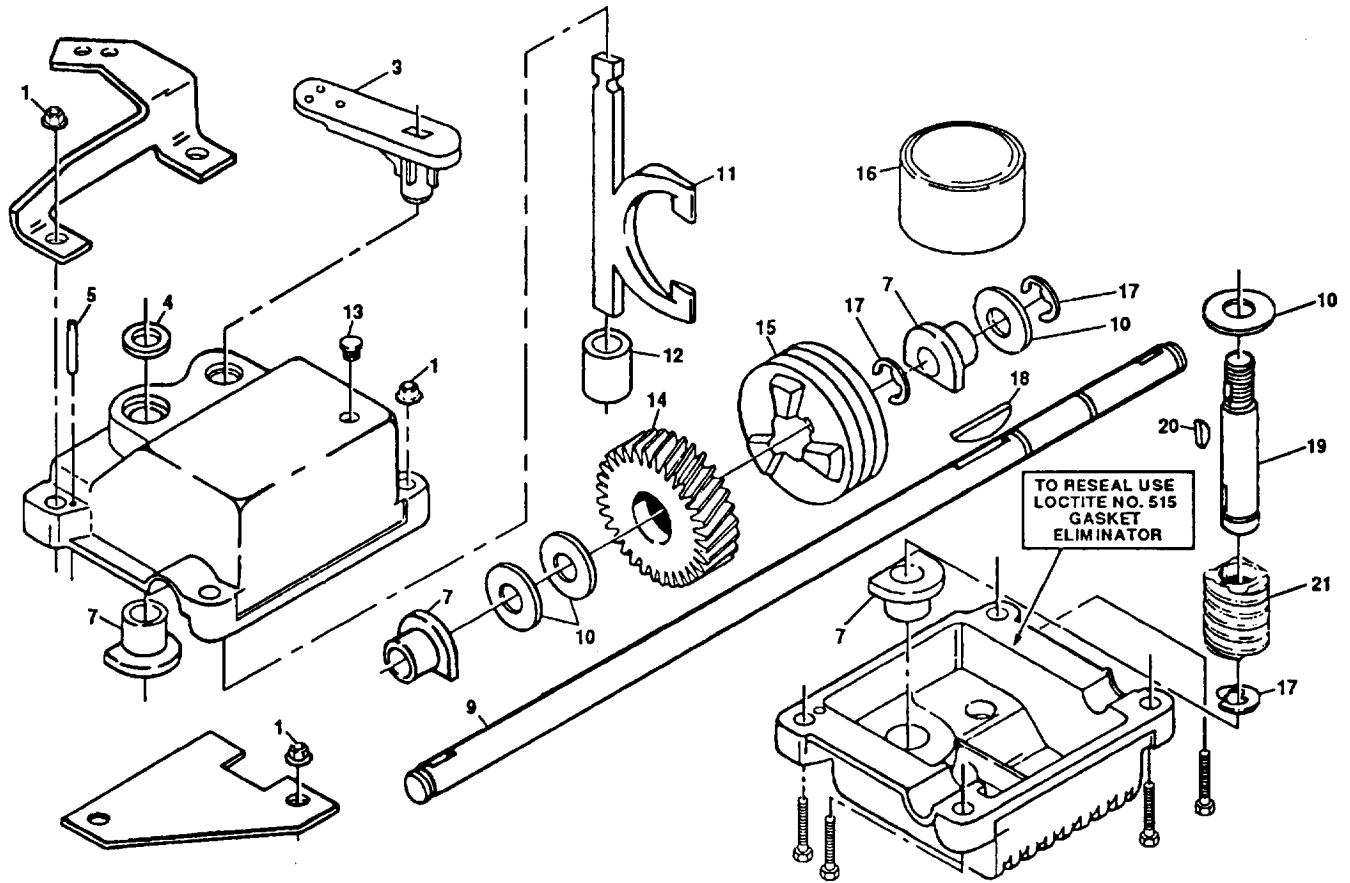


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	873 68 04-00	Locknut, Keps 1/4-20	13	532 08 64-47	Plug
3	532 13 70-53	Shifter	14	532 08 36-59	Gear, Helical
4	532 05 70-72	Seal	15	532 75 04-36	Jaw, Clutch
5	532 05 73-88	Pin, Grooved 1/8x 1/2	16	532 75 03-69	Grease
7	532 07 78-81	Bearing	17	812 00 00-03	E-Ring
9	532 75 04-30	Drive Shaft	18	532 85 08-48	Key, Hi-Pro
10	532 05 70-79	Washer, Hardened	19	532 13 14-81	Shaft, Worm
11	532 13 14-84	Yoke, Clutch	20	532 06 56-92	Key, Woodruff, #3
12	532 70 03-43	Bushing	21	532 08 36-80	Worm

Jonsered

Jonsered Power Products AB
433 81 Partille Sweden


REPAIR PARTS, 1

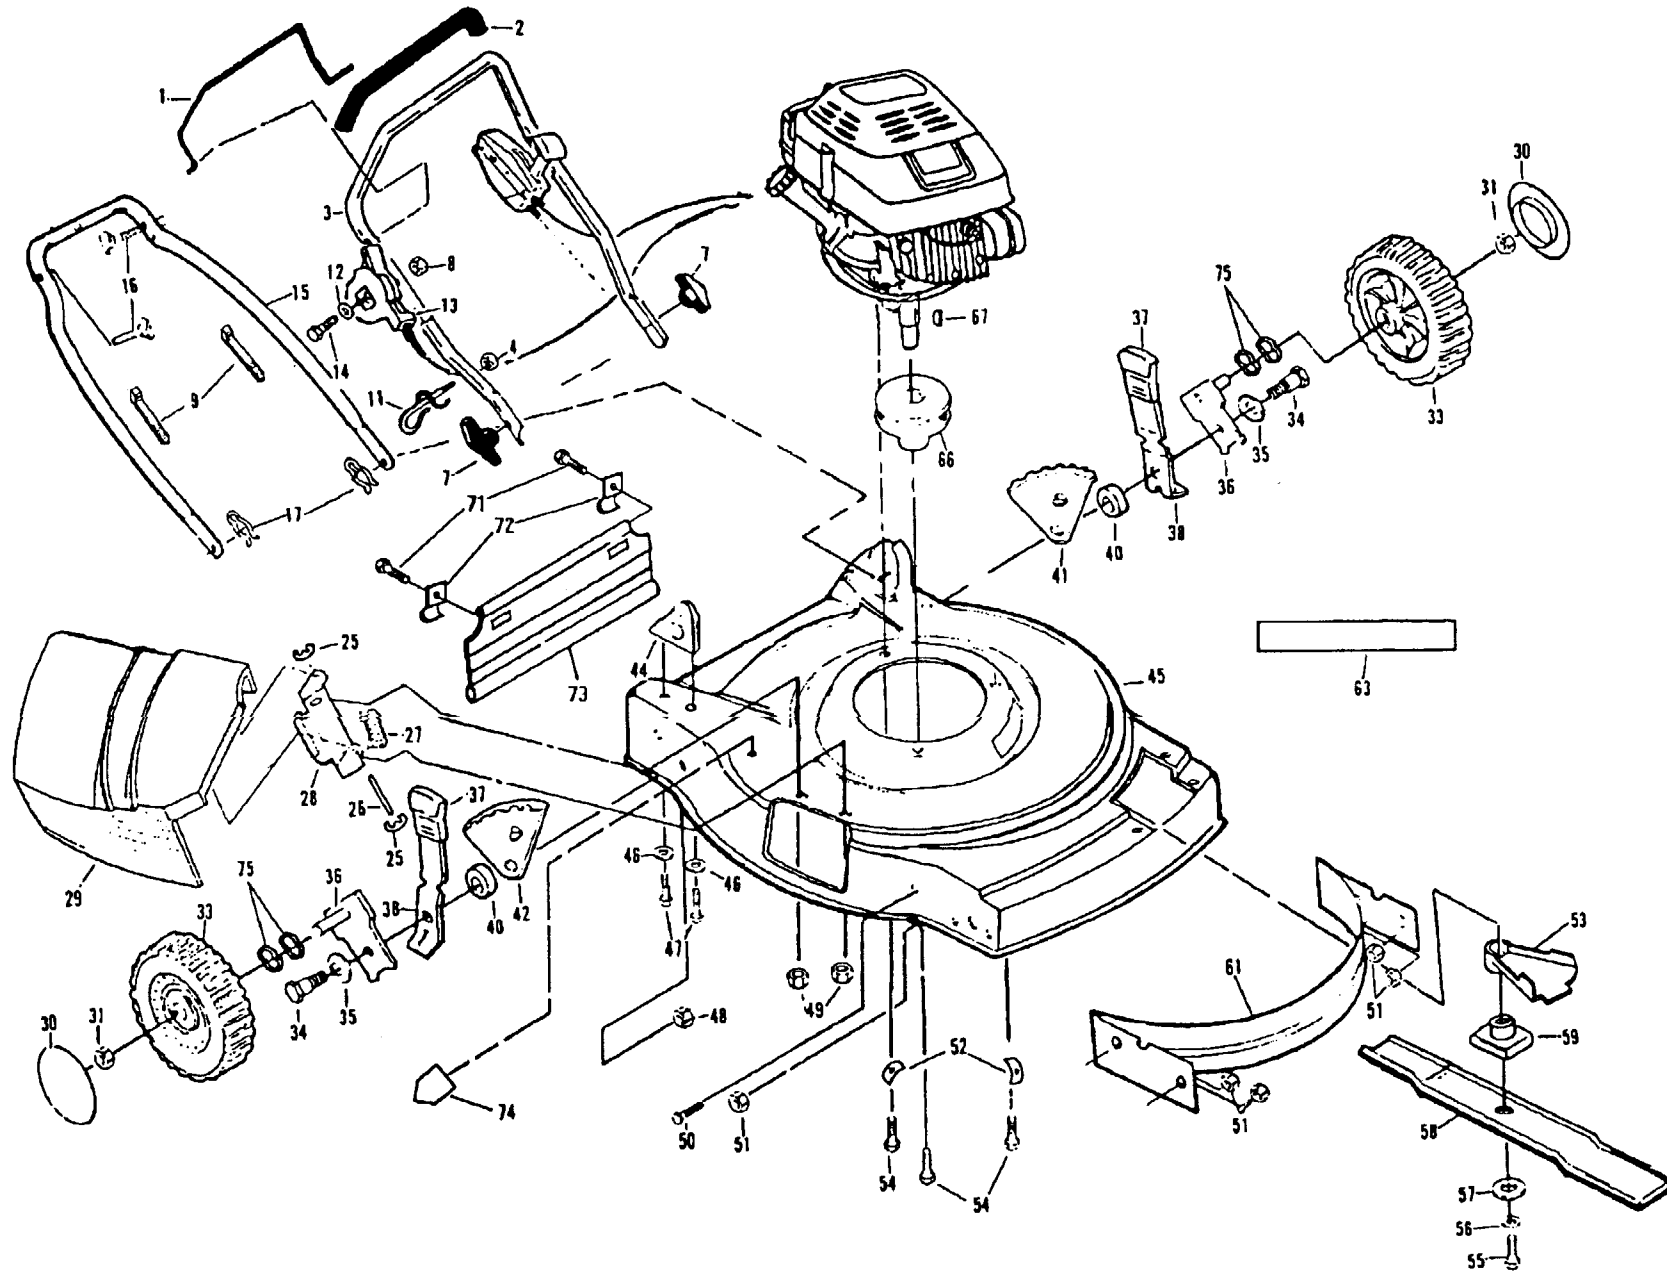

REPAIR PARTS, 1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 13 10-94	Control Bar	44	532 12 53-28	Handle Bracket Assembly (Right)
2	532 85 07-24	Handle Grip	45	532 12 91-64	Lawn Mower Housing (Incl. Ref. #63, 74)
3	532 12 52-20	Upper Handle	46	532 05 92-89	Washer
4	873 68 04-00	Keps Locknut1/4-20	47	532 05 51-87	SelfTappingScrew5/16-18x3/4
7	532 13 63-76	Handle Knob	48	873 68 06-00	Locknut 3/8-16
8	873 68 04-00	Locknut 1/4-20	49	873 68 04-00	Locknut 1/4-20
9	532 06 64-26	Wire Ties	50	874 10 04-12	Flat Head Machine Screw 1/4-20 x 3/4
11	532 13 20-01	Rope Guide	51	873 68 04-00	Locknut 1/4-20
12	532 08 57-23	Washer 9/32 x 5/8 x 1/16	52	532 12 50-78	Washer
13	532 12 86-57	Throttle Control	53	532 13 22-31	Debris Shield
14	532 85 11-85	Screw	54	532 85 09-98	HexHeadThreadRollingScrew3/8-16x1
15	532 12 51-60	Lower Handle	55	532 85 10-84	Hex Head Screw 3/8-24 x 1 -3/8 Greade 8
16	532 13 19-59	Handle Bolt 5/16-18 x 1 -3/4	56	532 85 02-63	Washer, Lock Helical 3/8
17	532 05 17-93	Hairpin Cotter	57	532 85 10-74	Hardened Washer
25	812 00 00-14	E-Ring	58	532 85 09-73	22" Blade
26	532 08 75-90	Hinge Rod	59	532 85 15-14	Blade Adapter
27	532 08 75-89	Torsion Spring	61	532 12 54-42	Front Baffle
28	532 08 75-93	Housing Bracket Assembly	62	532 12 53-81	Rear Baffle (Not Shown)
29	532 75 01-49	Discharge Guard	63	532 80 06-39	Warning Decal
30	532 80 11-53	Hubcap	66	532 08 55-43	Engine Pulley
31	532 08 39-23	Locknut 3/8-16	67	532 08 76-77	Hi-Pro Key #HP 505
33	532 75 05-50	Wheel & Tire Assembly	71	817 02 10-08	Hex Washer Head Screw #10-24 x .50
34	532 08 49-21	Shoulder Bolt 3/8-16	72	532 12 52-07	Skirt Bracket
35	532 06 23-35	Belleville Washer 1/2	73	532 12 87-97	Rear Skirt
36	532 12 50-61	Axle Arm Assembly	74	532 10 73-39	Warning Decal
37	532 13 28-00	Selector Knob	75	532 05 71-43	Wave Washer
38	532 12 52-59	Selector Spring			
40	532 08 49-20	Spacer			
41	532 08 86-42	WheelAdjusting Bracket (Left)			
42	532 08 86-41	WheelAdjusting Bracket(Right)			

REPAIR PARTS, 2

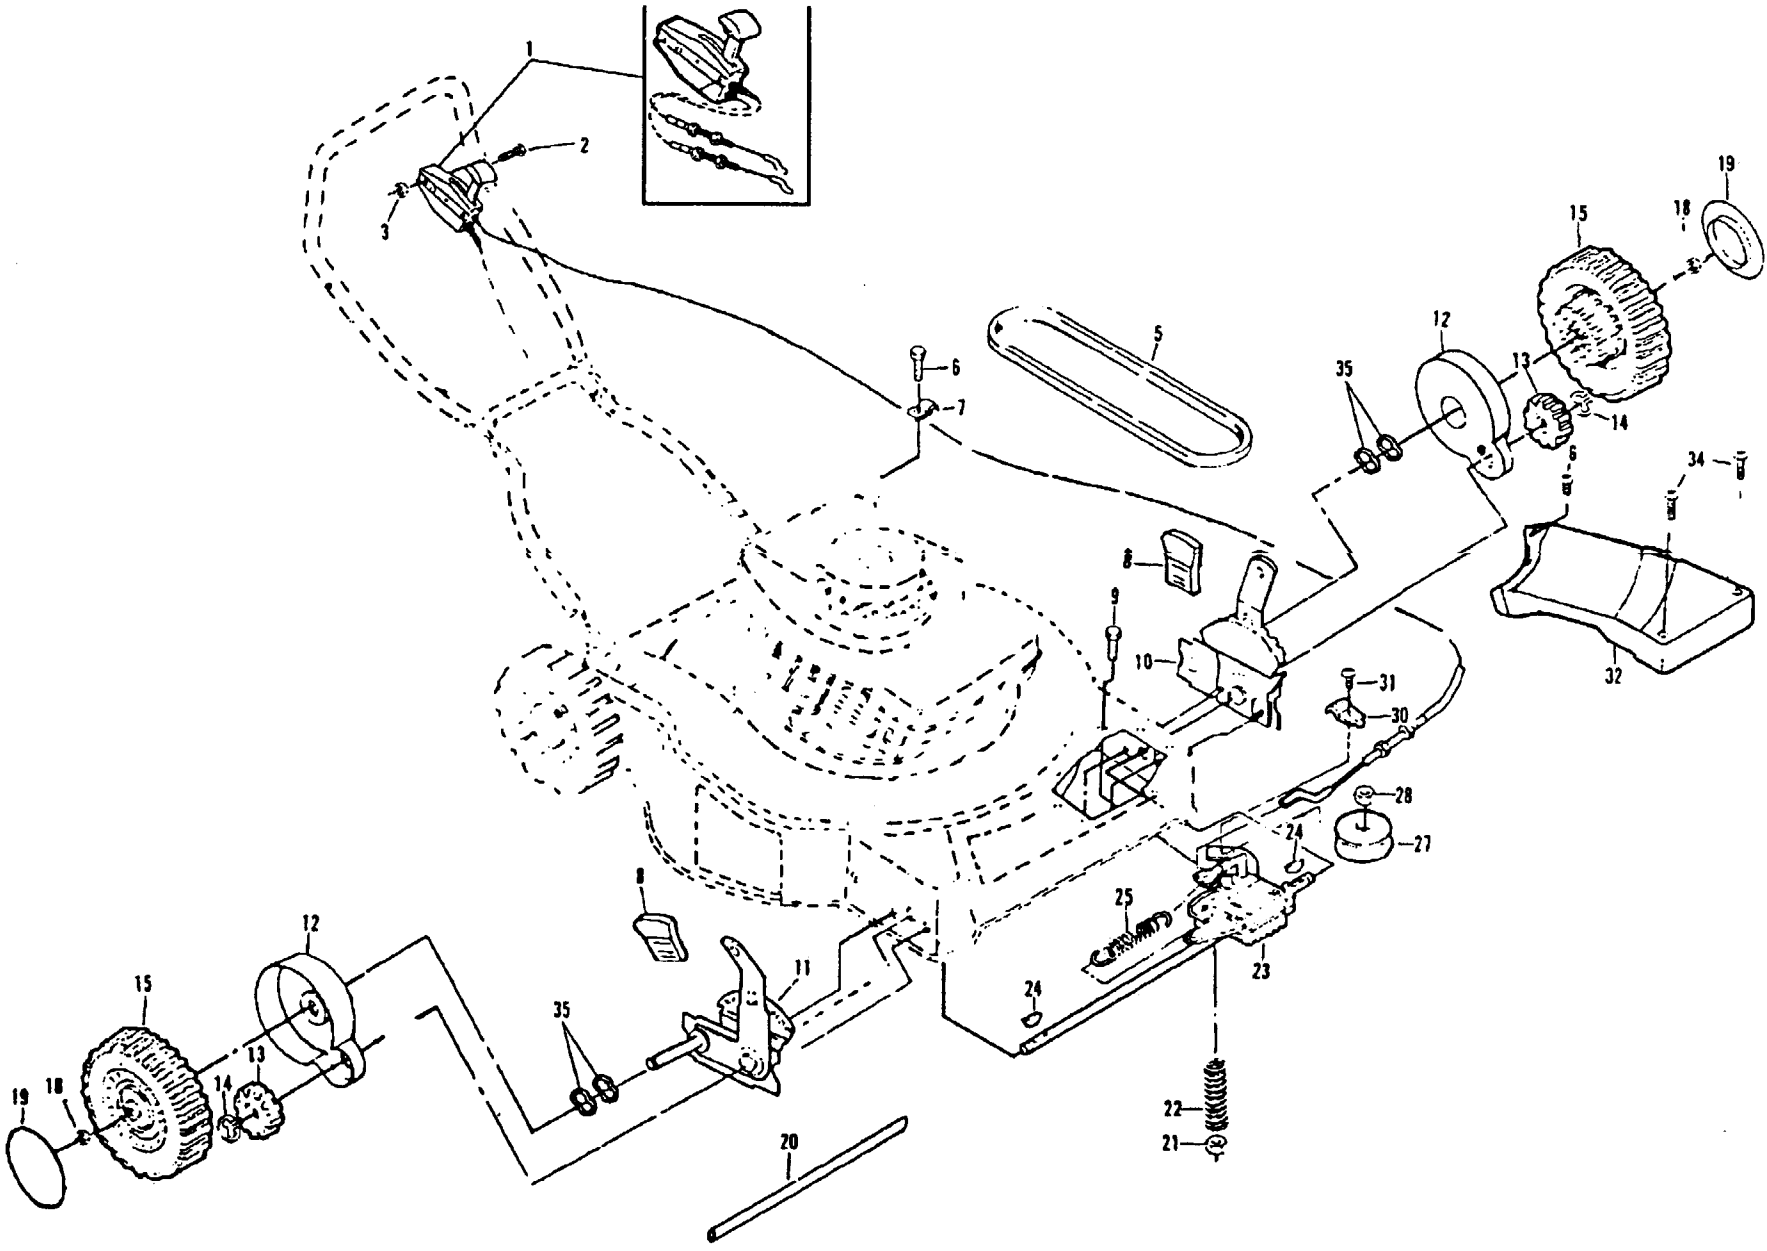

REPAIR PARTS, 2

KEY NO.	PART NO.	DESCRIPTION
1	532 80 16-34	Dual Head CableControlAssembly
2	532 08 56-92	Pan Head Machine Screw 1/4-20 x 2-3/16
3	873 68 04-00	Locknut
5	532 08 36-91	V-Belt
6	817 02 10-08	Hex Washer Head Screw #10-24 x 1/2
7	532 08 79-30	Clip Guide (Housing)
8	532 13 28-00	Selector Knob
9	874 78 04-44	Hex Head Bolt 1/4-20 x 2-3/4
10	532 12 91-74	Wheel Adjuster Assembly (Left)
11	532 12 91-73	Wheel Adjuster Assembly (Right)
12	532 07 64-01	Dust Cover
13	532 07 45-07	Pinion
14	812 00 00-03	E-Ring
15	532 08 78-26	Wheel & Tire Assembly
18	532 08 39-23	Locknut, 3/8-16

KEY NO.	PART NO.	DESCRIPTION
19	532 13 51-22	Hubcap
20	532 08 60-12	Drive Shaft Cover
21	873 68 04-00	Locknut
22	532 07 51-92	S-pring
23	532 04 82-81	Gear Case Assembly
24	532 06 56-92	Woodruff Key #3
25	532 08 36-32	Spring
27	532 13 14-82	Drive Pulley
28	532 13 20-10	Locknut
30	532 08 37-00	Cable Clamp
31	532 75 01-08	Pan Head Self Tapping Screw #10-24 x 3/8
32	532 75 10-29	Drive Cover
34	532 08 78-66	Pan Head Tapping Screw #10-24 x 2-3/4
35	532 05 71-43	Wave Washer